

INSTALLATION GUIDE COMPACT DISPENSER WITH CANHOLDER

(version 5.0)




1. GENERAL

Thank you for choosing the Compact Dispenser with canholder. This installation guide describes the installation process step-by-step. Please read this document and the safety instructions carefully before starting the installation.


If you have any questions or require clarification, please contact SAMA Water Products or your local agent.

2. INSTALLATION

The Compact Dispenser is supplied with the following parts and documents:

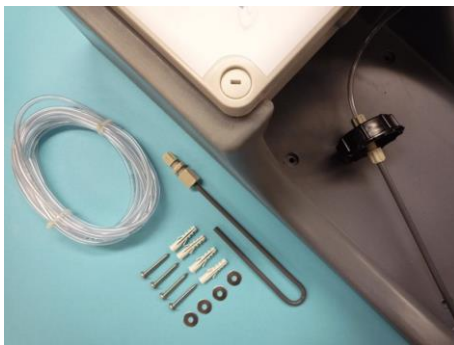

1. Screws and plugs for wall-mounting
2. Approx. 5 metres PVC-tube (6 x 4 mm)
3. Suction pipe with cap for 5-litre containers
4. U-trap for dosing in tank or machine
5. User manual (supplied separately)
6. This installation guidance

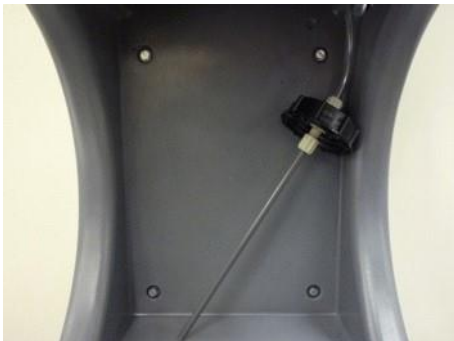

Mounting the Dispenser

Mount the dispenser to the wall near a wall socket and close to the tank or machine where the product will be dosed. For convenient operation and reading of the display, it is recommended to mount the LCD display at eye level.

The back panel of the canholder contains four mounting holes. Screws and wall plugs are included.



Connecting the Outlet Tube

At the lower left side of the canholder, a coupling is installed. This coupling is connected to the outlet side of the pump.

To connect the tube:

1. Unscrew the coupling.
2. Slide the locking ring over the tube.
3. Push the tube onto the coupling.
4. Slide the locking ring toward the connection.
5. Tighten the coupling by hand.

When properly installed, this ensures a secure and tight connection.

INSTALLATION GUIDE COMPACT DISPENSER WITH CANHOLDER

(version 5.0)



Routing the tube

Route the tube to the tank or machine. Shorten the tube if necessary. Ensure the tube is not sharply bent and is installed without tension.



Installing the U-Trap

Connect the pressure tube to the U-trap using the same coupling method described above. The U-trap is then ready for installation.

Hang the U-trap on the tank or machine.

If the U-trap cannot be used, the pressure tube may be connected directly to the tank or machine using a suitable tank wall coupling. These couplings are available at your dealer or SAMA Water Products.



Installing the Suction Pipe

Place the suction pipe in the container and tighten the cap securely.

Place the container in the canholder.

Ensure that the suction tube is not bent or kinked.

Final Steps

Installation is now complete and the Compact Dispenser can be put into operation.

Connect the plug to the wall socket and switch on the unit using the main switch.

The tubes must be filled before operation. The Compact Dispenser includes a dedicated function for priming. For detailed instructions on priming and other functions, refer to the user manual supplied separately.

INSTALLATION GUIDE COMPACT DISPENSER WITH CANHOLDER

(version 5.0)



3. OPERATION

For detailed operating instructions, please refer to the user manual supplied with the unit.

4. SAFETY INFORMATION

The machine must only be operated by qualified personnel who have been instructed in its proper use.

Ensure the machine can be supervised during operation to prevent improper use.

Repairs may only be carried out by trained service personnel. Modifications may only be performed by personnel authorised by the manufacturer.

If visible damage to the housing is detected, do not operate the machine.

If the machine is connected to other devices or systems and it is unclear whether hazards may arise from the combination of these devices, consult the respective manufacturers.

Do not bypass or disconnect the integrated safety features.

Switch off and disconnect the machine from the mains before performing maintenance or repairs.

If smoke, unusual noise, or malfunction occurs, disconnect the machine immediately.

Chemical Handling Instructions

When handling chemicals:

- Follow all safety and environmental regulations.
- Observe instructions and warnings enclosed with the chemicals.
- Dispose of chemicals and wastewater in accordance with the local regulations.
- Wear appropriate protective clothing and safety goggles.

In case of contact with eyes, rinse immediately with clean water and seek medical attention.

Ensure adequate ventilation at the installation site.

Regularly inspect all components for tightness and integrity.

If liquid gets inside the machine due to spillage, disconnect it immediately and have it inspected by technical service personnel.

5. TECHNICAL SPECIFICATIONS

All values are approximate.

Supply voltage	: 230 V
Power	: 13 W
Dimensions (including connections and pump)	: Width x Height x Depth = 27.5 x 60 x 26 cm
Maximum pump capacity	: 1.5 litres per hour

Subject to modification.

INSTALLATION GUIDE COMPACT DISPENSER WITH CANHOLDER

(version 5.0)



6. REGULATORY INFORMATION

CE Marking

The Compact Dispenser complies with applicable European Union legislation. The CE marking on the product indicates conformity with relevant EU directives concerning electrical safety, electromagnetic compatibility and environmental requirements.

The product has been designed and manufactured in accordance with applicable European standards.

Disposal of Electrical Equipment (WEEE)

This product is subject to the provisions of the Waste Electrical and Electronic Equipment Directive (WEEE) 2012/19/EU.

Electrical equipment marked with the crossed-out wheeled bin symbol must not be disposed of with household waste.

At the end of its service life, the product must be disposed of in accordance with applicable local regulations for electronic waste.

For information about proper disposal, please contact your local waste authority or SAMA Water Products.

7. RESPONSIBILITY

The VLOCLEAR dispenser and any associated accessories should be installed by qualified technical personnel.

Repairs may only be carried out by qualified technicians. Any modifications to the equipment or installation must be performed by personnel authorised by the manufacturer.

INSTALLATION GUIDE COMPACT DISPENSER WITH CANHOLDER

(version 5.0)



8. EU DECLARATION OF CONFORMITY

Manufacturer:

SAMA Water Products BV
Archimedesstraat 12
NL-3316 AB Dordrecht
The Netherlands
+31-(0)78-6393790
info@samawaterproducts.com

Herewith declares that the **Compact Dispenser with canholder** complies with:

- Low Voltage Directive 2014/35/EU
- Electromagnetic Compatibility Directive 2014/30/EU
- Restriction of Hazardous Substances Directive 2011/65/EU
- Waste Electrical and Electronic Equipment Directive 2012/19/EU

Sint Maartensdijk, October 1, 2017

A handwritten signature in blue ink, consisting of several loops and a long horizontal stroke extending to the right.

R. van der Graaf